



When FTDI connected and mouse is jumping over so you can't control PC you need to unplug USB and make some changes in USB port settings. Warning PORT number can vary – should not be a COM3 all the time.

Run a device manager:

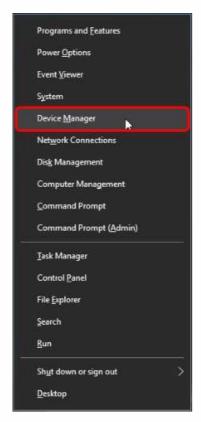


Ten you need to find USB ports, plug USB and make really quick setup:

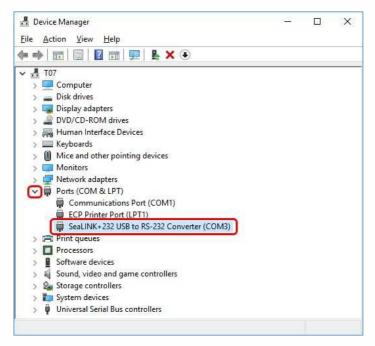




Then click port settings, then click advanced

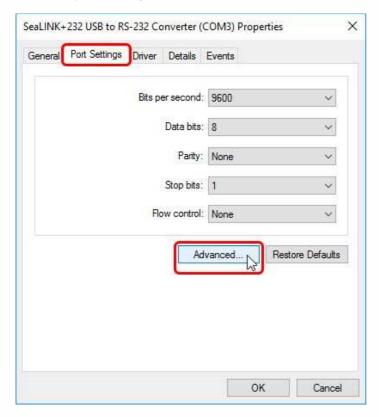

And then you will find out Seral Enumerator will have tick there and u need to **UNCLICK IT !!!!! and then OK.**

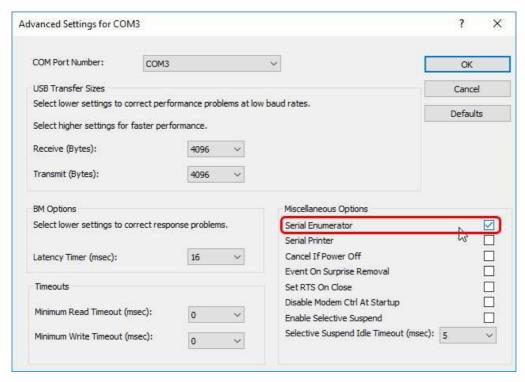

DONE! ; , now you can start the software

SRS Group s.r.o.

Rybnicna 36/D, 831 07 Bratislava, Slovakia

phone: +421232661800, email: sales@srs-group.com, www.srs-group.com

IČO: 44520433, IČ-DPH/VAT No.: SK2022726629