



Hoist Controller for Low Voltage Hoist

Instruction Manual

Models:

AHD12-LV-D3SX19
AHD12-LV-D3SX19-63

version 1.1 since 3 February 2020

ATTENTION!

This instruction manual contains important information about the installation and the use of the equipment. Please read and follow these instructions carefully.

Always ensure that the power to the equipment is disconnected before opening the equipment or commencing any maintenance work.

Safety information

IMPORTANT INSTRUCTIONS

All safety and operating instructions should be read before the equipment is installed or operated.

IMPORTANT SAFETY INFORMATION

The following general safety precautions have to be observed during all phases of operation, service, and the repair of this equipment. Failure to comply with these precautions or with specific warnings in this manual violates safety standards of design, manufacture, and the intended use of this equipment.

Do not operate in an explosive atmosphere!

Do not operate this equipment in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

Water, moisture, heat and humidity

Do not operate this equipment near water or in areas with wet floors or in high humidity atmosphere where condensation forms on the equipment. It should never be placed near or over a heat register or other source of heated air and it should not be installed or operated without proper ventilation.

Functions and Control

AHD12-LV-D3SX19 was designed to control up to 12 electrically compatible low voltage controlled hoists, either separately or simultaneously – controlled via switches located on front panel or cable remote/pendant. Optionally you can link GO/STOP button by link connector.


The device is equipped with unique APA (Automatic Phase Align) module, which guarantees that the motors are still moving in the same direction on any align of input phases. If any line wire is disconnected, the hoist controller stops to ensure safe operation. Another feature of GMC-DV is the AVM (Automatic Voltage Metering) module. This module checks main voltage for AC 400V +20%, star configuration and protects the hoists in case of problem with main voltage. Unit will not go into the safe function if:

- one phase is missing
- there is under voltage on lines
- there is overvoltage on lines

All electrical components carry their own individual cSA/UL, CE and comply with European Directives. The components are housed in robust steel 19" rack casing with powder coating. Complete unit complies with the CE according the Certification of conformity.

AHD12-LV-D3SX19

AHD12-LV-D3SX19 front panel

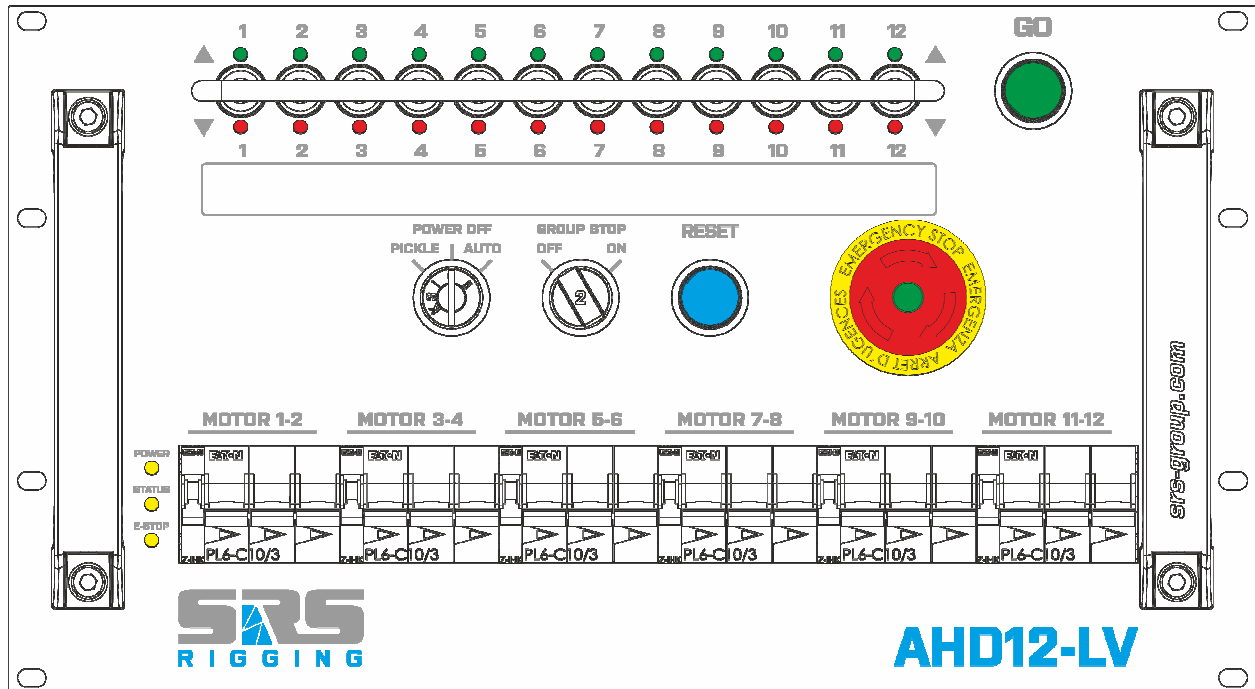

HOIST protection:

AHD12-LV-D3SX19: Each two hoists are protected by single C10/3p MCB

POWER switch positions:

- OFF: Power OFF
- PICKLE: Power to the hoist is enabled permanently
- AUTO: Power and Control signal to the hoist are enabled ONLY when GO command is received

GROUP STOP switch positions:

- OFF: Trip of any breaker or mains GFI will not cause E-STOP.
- ON: Trip of any breaker or mains GFI will cause E-STOP of unit.
This E-STOP is transferred also to the linked devices.

RESET:

RESET button for SIL3 E-STOP relay reset.

E-STOP:

E-STOP is a red color mushroom. Once the E-STOP button has been pressed, it locks the unit into active position and must be rotated clockwise and released before disengaging. After engaging the E-stop button, the RESET procedure needs to be pressed when auto-reset is disabled or unit is used in standalone mode. When AUTO reset is enabled, the MASTER controller or remote sends the RESET command remotely.

GO:

This green pushbutton turns the selected channels of Hoist Control system ON when is active. Once the GO button has been depressed, the power and control signals of the hoists is turned OFF.

DIRECTION SWITCHES:

They allow changing the direction of movement for each motor/hoist separately or in groups. LED close to the switch indicates the movement direction.

They are also used for the IDENTIFY command. After identify command has been received, the LEDs on UP/DOWN directions are blinking to identify controller in network.

LIMIT STOP input:

LIMIT STOP connectors for external E-STOP from NLP device or another stop source. Short circuit on pair 1+2 or 3+4 will stop controller. Please follow RESET procedure to resolve limit STOP.

REMOTE/LINK:

Link input for linking of AHD units. For linking, you will need a 5-pin DMX data cable. Only first three pins 1,2,3 are used on cable.

POWER LED indication:

- OFF: Power OFF
- GREEN: Power OK
- YELLOW: Power OK, PICKLE mode enabled
- RED: Power failure, please check mains


STATUS LED indication:

- GREEN: READY to work in auto mode
- RED: GO is activated
- YELLOW: Direction switch is changing status

E-STOP LED indication:

- GREEN: Unit after reset, READY TO WORK
- YELLOW: Unit is waiting for RESET or linked unit is waiting for RESET
- RED steady: GROUP STOP or remote GROUP STOP is activated
- RED blinking: E-STOP from another linked device is activated
- RED double blink: LOCAL E-STOP is activated /mushroom pressed/

AHD12-LV-D3SX19 CEE rear panel

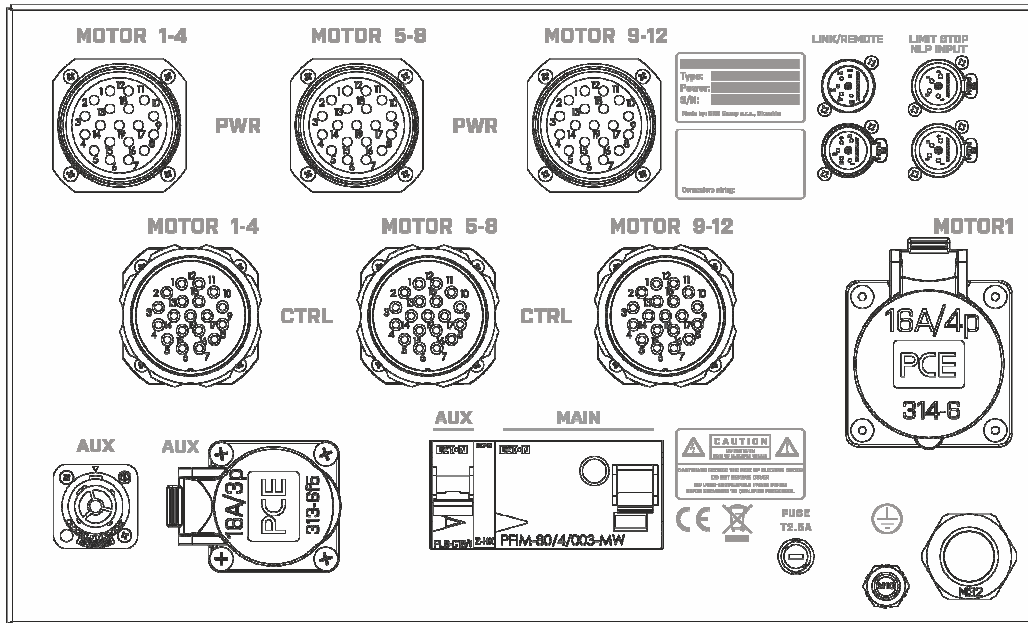

MAINS:

Mains input

AHD12-LV-D3SX19: CEE32/5p on 1.5m cable, cable is not displayed on preview

AHD12-LV-D3SX19-63: CEE63/5p on 1.5m cable, cable is not displayed on preview

OUTPUTS:

Socapex19 male/female hoist controller outputs. Check wiring diagram for more details.

MOTOR1:

CEE16/4p output connected in parallel to the power of MOTOR1, usually used in PICKLE mode to rewind the chain of the chain hoist.

FUSE:

Fuse used for mains transformer T2.5A.

AUX:

AUX output for additional AC230 powered devices. CEE16/3P and NAC3FPX panel mount. AUX is protected by C16/1p breaker wired behind MAIN GFI.

Operation

The Motor/hoists connected with the AHD12-LV-D3SX19 controller, can be activated individually or simultaneously using the GO switch located on the front panel or CABLE remote. Units can be optionally linked together to create bigger systems. Maximum of 16 units per link is allowed. This offer control up to 192 channels in per-channel mode or group mode.

How to start to use system

- Connect the CEE63/5p plug to the AC400V +20% power supply – turn the key to ON position. When the main is OK, the power LED is lit in green, otherwise the LED is in RED. In that case, please check phase voltages, frequency and presence of all phases.
- Connect the plugs for the electric hoists to the output sockets.
- Check that the E-STOP mushroom is not engaged on device or any other linked device in system.

How to RESET system

- Turn ON the unit via KEY to AUTO or PICKLE position
- RESET button with blue backlight should be ON, if not contact us.
- Make cycle so press and release E-STOP
- Press the BLUE reset button. After press, it'll be turned off.
- GO button should start to blink which indicates that controller is ready for work.

Move lever on front panel or remote corresponding to each motor, to the position required:

- UP - Lever in upper position
 - STAY – Lever in middle position
 - DOWN - Lever in lower position
- Pushing the GO button will activate the motors to move simultaneously
 - Releasing the GO button will stop the movement of the motors simultaneously.
 - When is device not used is highly recommended to turn it OFF by key located on front panel.

To Move a Single/Several hoist:

- Set the UP/DOWN toggle switch for that motor to the desired direction. The associated LED should light Green for UP, or Red for DOWN direction
- Hold the GO button and hoist are moving to the desired height until you hold the button. On final position release GO button

Hoist controller outputs

Socapex19 female power outputs for various order codes

SX19 female pin	944072 /STANDARD/	944206
1	M1 L1	M1 L1
2	M1 L2	M2 L1
3	M1 L3	M1 L2
4	M2 L1	M2 L2
5	M2 L2	M1 L3
6	M2 L3	M3 L2
7	M3 L1	M3 L1
8	M3 L2	M4 L1
9	M3 L3	M3 L2
10	M4 L1	M4 L2
11	M4 L2	M3 L3
12	M4 L3	M4 L3
13	PE/EARTH	PE/EARTH
14	PE/EARTH	PE/EARTH
15	PE/EARTH	PE/EARTH
16	PE/EARTH	PE/EARTH
17	PE/EARTH	PE/EARTH
18	PE/EARTH	PE/EARTH
19	PE/EARTH	NC/ NOT USED

Socapex19 Male Control Outputs for Various Order Codes

SX19 MALE	944073	944065	944155
1	COM M1	COM M1	COM M1
2	DOWN M1	DOWN M1	DOWN M1
3	UP M1	UP M1	UP M1
4	COM M1	COM M1	COM M1
5	DOWN M1	DOWN M1	DOWN M1
6	UP M1	UP M1	UP M1
7	COM M1	COM M1	COM M1
8	DOWN M1	DOWN M1	DOWN M1
9	UP M1	UP M1	UP M1
10	COM M1	COM M1	COM M1
11	DOWN M1	DOWN M1	DOWN M1
12	UP M1	UP M1	UP M1
13	PE/EARTH	PE/EARTH	PE/EARTH
14	PE/EARTH	PE/EARTH	PE/EARTH
15	PE/EARTH	PE/EARTH	PE/EARTH
16	PE/EARTH	PE/EARTH	PE/EARTH
17	PE/EARTH	PE/EARTH	NC/ NOT USED
18	PE/EARTH	PE/EARTH	NC/ NOT USED
19	PE/EARTH	NC/ NOT USED	NC/ NOT USED

Remote/link connector

Neutrik NC5-MAH/FAH

Connectors are used for a link operation of the unit or for an additional digital remote connection. Up to 30 units can be linked. They are then controlled via one GO and E-STOP button in the local operation mode.

Pin	Function	note
1	Data CMN	<i>Data Common</i>
2	Data -	<i>Data Minus</i>
3	Data+	<i>Data Plus</i>
4	DC1	<i>Power supply for CMC DC12-36V</i>
5	DC2	<i>Power supply for CMC DC12-36V</i>



LIMIT STOP connector

Neutrik NC4-FAH

Pin	Function	note
1	DC24-36V	Connected to 3
2	Active 1	Active line 1
3	DC24-36V	Connected to 1
4	Active2	Active line 2



Both safety lines are separate and NO /normally open/. If you need an NC contact, we can set it up via USB programming tool. Contact us at sales@srs-group.com.

For loadcell STOP activation, make short circuit of at least single pair of contacts. For reset of the loadcell STOP function, please follow the RESET procedure.

Technical data

Mains connection:

- Mains input AC400V +-20% 50/60Hz
- Mains Plug: CEE32A/5p or CEE63A/5p according to model

Protections and Safety:

- Short circuit protection for group of three hoist by automatic circuit breakers C10
- Mains leakage current protection 80A 30mA
- APA – Automatic Phase Align
- AVM – Automatic voltage metering
- ADR – Automatic digital reset
- Double mechanical blocking contactors
- Double - Recessed E-STOP with SIL3 certification

Metal Housing:

- Compact 6U size
- 3mm Steel front panel
- 400mm Deep metal body
- 1.5mm Steel housing with gray powder coating

Warranty

AHD12-LV-D3SX19 hoist controller comes with a 2-year manufacturer's warranty. For extended warranty conditions, please contact the manufacturer at sales@srs-group.com.

The warranty covers the original factory installed components of the controller and their correct functioning.

The warranty voids if:

- any part or replacement components is installed or modified without authorization from the manufacturer and/or the internal circuit is tampered or modified, and/or the controller is operated outside normal use conditions
- electrical power supply does not conform or there is a connection error or mechanical damage of the controller, including overload and improper use.

The manufacturer always helps you to repair your unit.

Copyright 2019 SRS Group, s.r.o. | Specifications subject to change without notice.
Document: 945051_AHD12-LV-D3SX19-63_en_manual_M326 | Version 1.1 | Actual as of: 3
February 2020



SRS Group s.r.o.

Rybnicna 38/B | 831 07 Bratislava | Slovakia

Phone: +421 2 32 661 800

Email: sales@srs-group.com | www.srs-group.com

