



# Cable Remote for GMC series Controllers

## Instruction Manual

Models:

**CMC-12, CMC-8, CMC-4**  
**CMC-12L, CMC-8L, CMC-4L**  
version 4.0 since 3 February 2020

### **ATTENTION!**

This instruction manual contains important information about the installation and the use of the equipment. Please read and follow these instructions carefully.

Always ensure that the power to the equipment is disconnected before opening the equipment or commencing any maintenance work.

# 1. Safety information

## ***IMPORTANT INSTRUCTIONS***

All safety and operating instructions should be read before the equipment is installed or operated.

## ***IMPORTANT SAFETY INFORMATION***

The following general safety precautions have to be observed during all phases of operation, service, and the repair of this equipment. Failure to comply with these precautions or with specific warnings in this manual violates safety standards of design, manufacture, and the intended use of this equipment.

### ***Do not operate in an explosive atmosphere!***


Do not operate this equipment in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

### ***Water, moisture, heat and humidity***

Do not operate this equipment near water or in areas with wet floors or in high humidity atmosphere where condensation forms on the equipment. It should never be placed near or over a heat register or other source of heated air and it should not be installed or operated without proper ventilation.

## 2. CMC remote

CMCseries controller allows controlling of the GMCseries device via cable connection. Standard length of cable is 10m. Longer cables are possible on request. There is also CMC-EC as cable extension with various lengths or CMC-EB box available for extension of cable for special purposes.

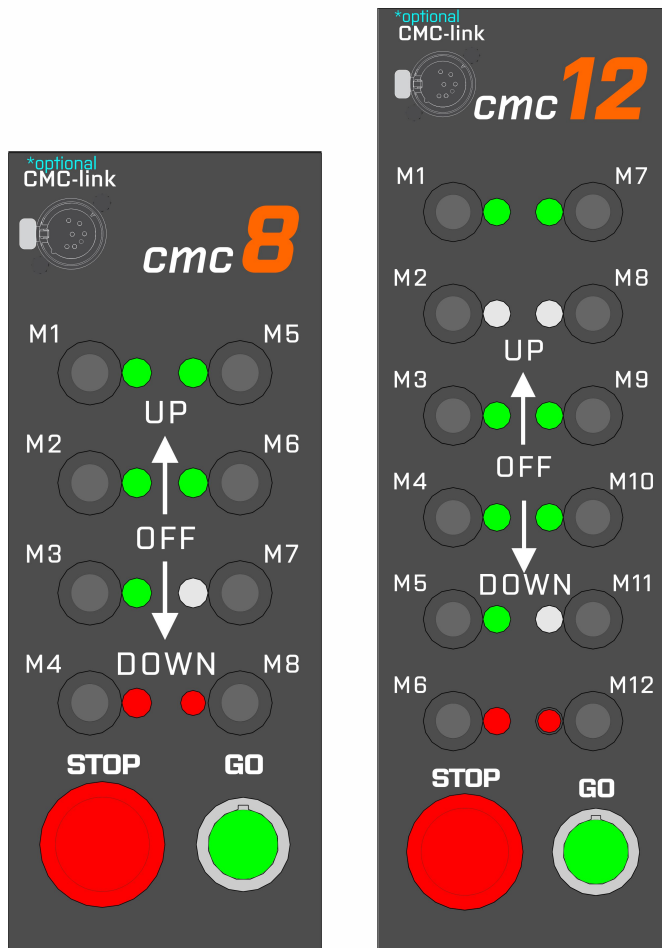

### STOP:

This switch protects the base unit from undesired operation and turns the MCseries controller to an inactive state. Stop is a red color button. Once the STOP button has been pressed, it locks into an inactive position and must be rotated clockwise and released before disengaging.

### GO:

This green pushbutton turns the selected channels of Hoist Control system ON when it is active. Once the GO button has been depressed, the energizing of the hoists is turned off. The GO button lights green when one or more direction switches are active /in up or down position/.

### DIRECTION SWITCHES:

They allow changing the direction of movement for each motor/hoist separately or in groups.

### LINK CONNECTOR \*optional:

CMC can be equipped with optional 7-pin female connector for linking of CMC controllers together. Any CMC-4L, CMC-8L or CMC-12L controller can be linked. Both GO and STOP buttons will be linked together.

**When the CMC-xxL unit is not being used in the link mode, it must be equipped with a 7-pin dummy plug with a short circuit between pins 1 and 6.**

## 3. Connector description

### 3.1 Remote connector

Amphenol DS3102A28-21S

Pin	Function	CMC12A	CMC8A
1	<b>M1 down</b>	<b>X</b>	<b>X</b>
2	<b>M1 up</b>	<b>V</b>	<b>V</b>
3	<b>M2 down</b>	<i>c</i>	<i>c</i>
4	<b>M2 up</b>	<i>d</i>	<i>d</i>
5	<b>M3 down</b>	<i>b</i>	<i>b</i>
6	<b>M3 up</b>	<i>h</i>	<i>h</i>
7	<b>M4 down</b>	<i>i</i>	<i>i</i>
8	<b>M4 up</b>	<i>k</i>	<i>k</i>
9	<b>M5 down</b>	<i>e</i>	<i>e</i>
10	<b>M5 up</b>	<b>Z</b>	<b>Z</b>
11	<b>M6 down</b>	<b>W</b>	<b>W</b>
12	<b>M6 up</b>	<b>L</b>	<b>L</b>
13	<b>M7 down</b>	<b>K</b>	<b>K</b>
14	<b>M7 up</b>	<b>U</b>	<b>U</b>
15	<b>M8 down</b>	<i>m</i>	<i>m</i>
16	<b>M8 up</b>	<i>f</i>	<i>f</i>
17	<b>M9 down</b>	<b>R</b>	-
18	<b>M9 up</b>	<b>P</b>	-
19	<b>M10 down</b>	<b>N</b>	-
20	<b>M10 up</b>	<b>M</b>	-
21	<b>M11 down</b>	<b>F</b>	-
22	<b>M11 up</b>	<b>E</b>	-
23	<b>M12 down</b>	<b>T</b>	-
24	<b>M12 up</b>	<b>S</b>	-
25	<b>Contactor ON</b>	<i>a</i>	<i>a</i>
26	<b>AC1 24V</b>	<i>g</i>	<i>g</i>
27	<b>AC1 24V</b>	<i>n</i>	<i>n</i>
28	<b>AC1 24V</b>	<i>p</i>	<i>p</i>
29	<b>AC2 24V</b>	<i>r</i>	<i>r</i>
30	<b>GROUND</b>	<i>s</i>	<i>s</i>



## 3.2 Housing:

- 2mm AlMg3 housing with gray powder coating
- 3mm AlMg3 protection of switches

## 3.3 Dimensions /W x D x H/:

CMC12: 107 x 330 x 105 mm

CMC8: 107 x 260 x 105 mm

CMC4: 107 x 192 x 105 mm

## 4. Warranty

CMCseries hoist controller remote is covered by a 2-year manufacturer's warranty. For extended warranty conditions please contact the manufacturer at [sales@srs-group.com](mailto:sales@srs-group.com).

Warranty covers the original factory installed components of the controller and their correct functioning.

Warranty voids if any part or replacement components are installed or modified without authorization from the manufacturer and/or the internal circuit is tampered or modified and/or the controller is operated outside normal use conditions – electrical power supply does not conform or there is a connection error or mechanical damage of controller, including the overload and improper use.

The manufacturer always helps you with repairing your unit.



Copyright 2017 SRS Group, s.r.o. | Specifications subject to change without notice.  
Document: CMCXX\_en\_manual\_M010 | Version 4.0 | Actual as of: 3 February 2020



**SRS Group s.r.o.**

Rybnicna 38/B | 831 07 Bratislava | Slovakia

Phone: +421 2 32 661 800

Email: [sales@srs-group.com](mailto:sales@srs-group.com) | [www.srs-group.com](http://www.srs-group.com)

